
Welcome to Teensy® 4.1

32 Bit Arduino-Compatible Microcontroller


To begin using Teensy, please visit the website & click Getting Started.


www.pjrc.com/teensy

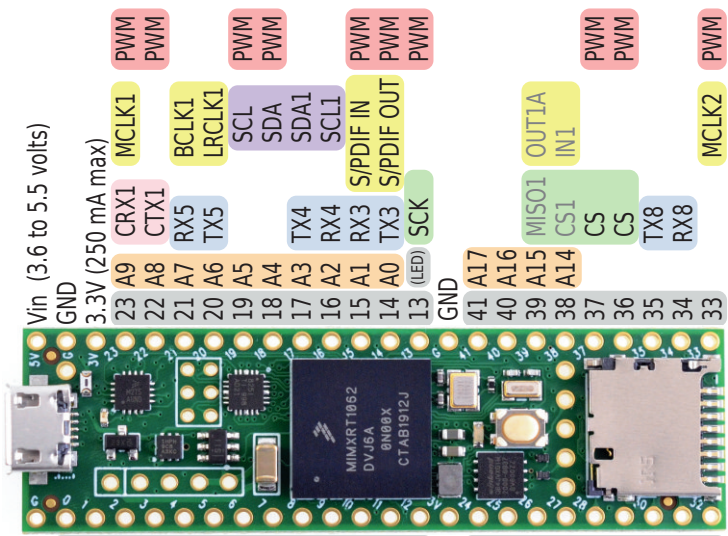



Teensy® 4.1 Features


Special Features and Additional Pins

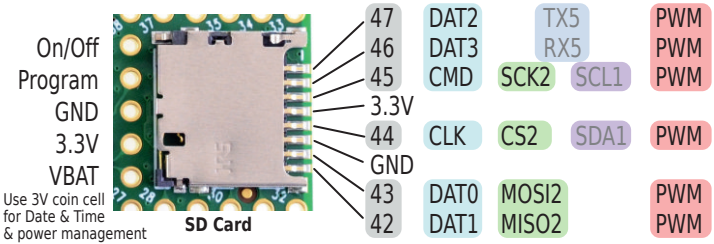

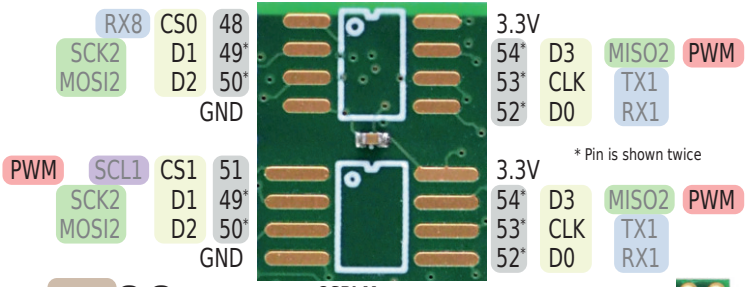

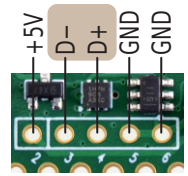

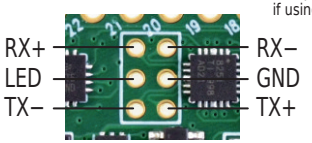

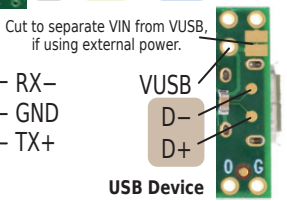

For solutions to the most common issues and technical support, please visit:

www.pjrc.com/help

Teensy 4.1 pins are **not 5 volt tolerant**. Do not apply more than 3.3V to any pin, except VIN & VUSB.

Teensy 4.1 System Requirements:
PC computer with Windows 7, 8, 10, 11 or later
or Ubuntu Linux 14.04 or later
or Macintosh MacOS 10.10 or later
USB Micro-B Cable

7 14833 87947 3